 


Instruction manual of ESWAY ES Key remote control


By Shenzhen Ocam Electronic Technology Co., Ltd.

Install the remote control

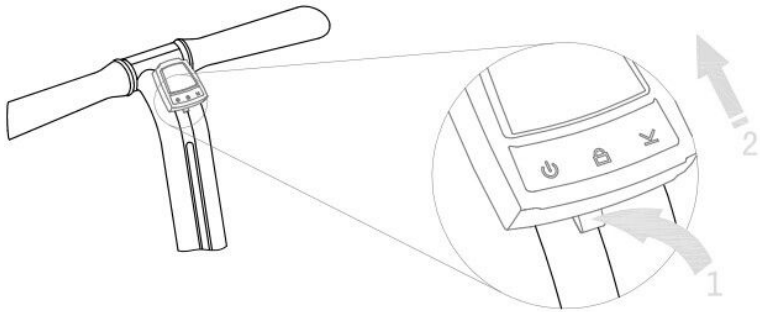

Picture.1

 Take ES Key remote control out, operate according to picture.1

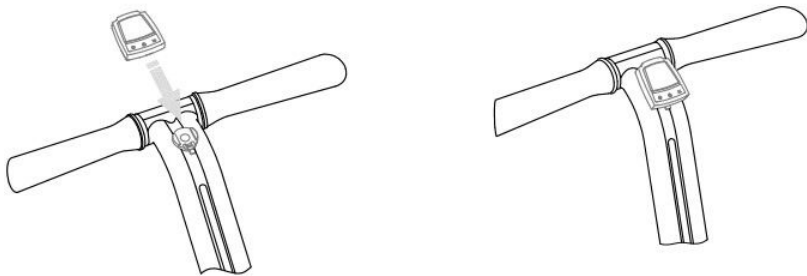

Picture.2

Put ES Key remote control back, operate according to picture.2




Remote control – icons explanations



 
CAUTION

If ESWAY chariot upwards, don't lean it forward anymore, the rider must lean backward firmly to stop immediately; otherwise the rider will be fall off and hurt himself, even more serious consequences happened if not in according with the speed limit. Please ride carefully to avoid falls. Beginners are recommended to use beginner mode.






Beginner mode


Press  key and  icon displays, it means beginner mode starts, and the speed is limited within 6KM. You can press  key again to exit the beginner mode.



Press  key to enter Beginner mode and speed limited within 6KM/h; press key again to exit the mode.



 
Self-balance mode (shove mode)

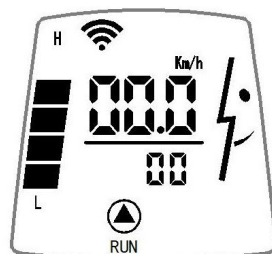Press  key and  displays, it means ESWAY starts self-balance mode, you can easily push the chariot go ahead. You can press  key again to exit self-balance mode, and  icon will disappears. A one-second long pressing on  key to turn on the screen backlight, and long pressing again to turn off the screen backlight.



Press  key to enter self-balance mode.


Burglar mode


Press  key and  displays, ESWAY starts Burglar mode. If anyone moved it, alarm sound will ring out; press  again to release burglar mode.



Press  to enter burglar mode.

Remote control low battery status

Once the icon of  displays, it means battery is low and less than enough. Please take the remote control off, charge it by connecting with computer or 5V power source by a Micro USB cable. Once charging completed, low battery icon will disappear automatically.

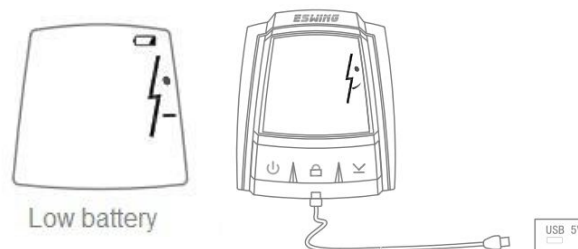 


Low battery

Chariot battery status

ESWAY chariot battery is showed by 5 grids. With the battery gradually reducing; the chariot will automatically limit speed in order to ensure the safety to the riders.

 Note: Above 4 grids, speed limited at 16KM/H; 3 grids, speed limited at 14KM/H; 2 grids, speed limited at 8KM/H; 1 grid, speed limited at 5KM/H.

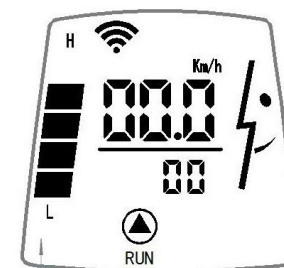

Chariot battery status


Connection signal with chariot


ESWAY chariot connection signal distance is within 15 meters; once beyond this range, the remote will display no connection.



Lose connection

Trouble warning

Once the icon  displays, it means error happens. E-1 ~E-5 will display to tell you how to solve the simple troubles.

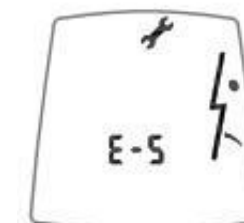 

Error code